

Viconic Sporting d/b/a Viconic Health



Performance Analysis of Flooring Systems With and Without  
Viconic Fall Defense™

---

Joel Cormier | Director of Engineering and Sales  
jcormier@viconichealth.com (313) 680-6889  
1100 Oakwood Blvd Dearborn, MI 48124

Jackson Elliott | Development Engineer  
jelliott@viconichealth.com (734) 259-9148  
1100 Oakwood Blvd Dearborn, MI 48124

**October 2026**

## Table of Contents

|                                                                    |    |
|--------------------------------------------------------------------|----|
| 1. Background .....                                                | 3  |
| 2. Introduction .....                                              | 4  |
| 3. Provider Partner Installations, Fall Data, and Feedback .....   | 5  |
| 4. Methodology, Test Methods, Results, and Analysis Overview ..... | 8  |
| 5. Head Impact Testing, Description, and Analysis .....            | 10 |
| 6. Body Impact Testing, Description, and Analysis .....            | 13 |
| 7. Hip Impact Testing, Description, and Analysis .....             | 14 |
| 8. Mobility and Stability Testing, Description, and Analysis ..... | 16 |
| 9. Surface Comfort Testing, Description, and Analysis .....        | 17 |
| 10. Acoustics Testing, Description, and Analysis .....             | 19 |
| 11. Conclusion .....                                               | 24 |
| 12. References .....                                               | 25 |
| 13. Appendix .....                                                 | 26 |

## Background

Fall-related injuries among the ever-growing North American elderly population are a major health concern. In the United States, nearly 340,000 hip fractures occur per year,<sup>1</sup> more than 90% of which are associated with falls.<sup>2,3</sup> It is estimated this number may double or triple by the middle of the century.<sup>4</sup> The repercussions of hip fracture among the elderly add to the concern surrounding the issue. Over 25% of hip fracture patients over 65 years of age die within 1 year of the injury, and more than 50% suffer major declines in mobility and functional independence.<sup>5,6</sup> Traumatic brain injuries (TBI) also make up a significant portion of fall-related injuries; seniors are hospitalized twice as often as the general population for fall-related TBI.<sup>7</sup> The risk for fall-related TBI increases substantially with age; persons over the age of 85 are hospitalized for fall-related TBI over twice as often as those aged 75-84, and over 6 times as often as those aged 65-74.<sup>8</sup> Despite efforts to reduce falls and the risk of fall-related injuries, studies show instances of fall-related injuries have increased in recent years. A study conducted by the University of Michigan showed a 1.5% annual average increase in Medicare claims due to fall-related injuries from 2016-2019.<sup>9</sup> The COVID-19 pandemic has also put additional strain on the healthcare community which has affected care of the elderly population. According to data submitted to the Centers for Medicare and Medicaid Services Quality Reporting Programs, during the second quarter of 2022, skilled nursing facilities saw rates of falls causing major injury increase by 17.4%.<sup>10</sup> The financial burden associated with fall-related healthcare is significant and ever-rising. As reported by the CDC, medical costs associated with falls are about \$50 billion per year, and the financial burden will only increase with the aging population. The number of falls among the older adult population in the US is expected to increase by nearly 45% by the year 2030.<sup>11</sup> Additionally, fall-related injuries continue to be the most common type of professional liability claim faced by skilled nursing facilities. Skilled nursing facilities paid an average of \$223,627 for fall-related claims in 2021, a 19% increase from 2018.<sup>12</sup> In order to reduce the physical and financial toll of fall-related injuries, it is the goal of Viconic to implement an underlayment system that will reduce impact forces and therefore reduce the potential risk of injury associated with fall-related impacts to the flooring surface.

## Introduction

Viconic Health is a Michigan-based company that has been applying proprietary automotive and military-grade energy absorbing technology to senior living flooring systems. Viconic's goal was to develop a flooring underlayment system that substantially reduces the risk of fall-related injuries while maintaining an individual's mobility, allowing older adults to maintain their health and independence. System cost, durability, thickness, ease of installation, and compatibility with a variety of flexible floor coverings were also considerations.

Viconic Fall Defense™ is the resultant proprietary product of over five years of product development and collaboration with key stakeholders including leading research institutions, flooring manufacturers, flooring installers, owner-operators, residents, caregivers, insurers, architects, and governing bodies. Key considerations included balancing injury risk reduction with mobility and stability, ADA accessibility, durability, comfort, and other system-level requirements and specifications.

The system is engineered for flexible/resilient floor coverings including commercial sheet goods, luxury vinyl tile, and carpet. Rigid floor coverings, such as wood, click-lock vinyl plank, ceramic tile, and other rigid floor coverings are not compatible with Viconic Fall Defense™, as point deformation and deflection of the flooring surface is essential for energy absorption. The modular engineered panels are made from resilient military-grade thermoplastics with integrated pressure-sensitive adhesive to adhere adjacent panels. Acrylic pressure-sensitive adhesives are generally recommended for adhering the floor covering to Viconic Fall Defense™. Reinforcement sheets are also available to maintain the integrity of the flooring surface for localized areas expected to experience regular heavy rolling loads or long-term heavy static loading above 75 psi.

The data presented in this report demonstrate Viconic's performance in laboratory testing and installed senior-living environments. Additional details about the metrics used for comparison of Fall Defense™ and traditional flooring systems will be provided along with results and summaries.

## **Provider Partner Installations, Fall Data, and Feedback**

After several years of development and successful lab evaluations, Viconic appreciated the need for real-world evaluations of the Fall Defense™ system. Although the lab results were extremely informative, understanding the effects of Viconic on the frequency and severity of fall-related injuries would ultimately demonstrate the system's overall efficacy.

In January 2021, Viconic created a grant program in which senior care communities could submit an application to become a provider partner. Under the provider partner agreements, Viconic donated Fall Defense™ panels and the community covered costs of floor coverings and installation. All care communities selected to be provider partners also agreed to share fall data for both the installed Viconic suites and a set of control rooms. In addition to receiving fall data, this process allowed Viconic the opportunity to gather invaluable feedback from residents, installers, nurses, facility managers, and owner-operators.

Viconic does not currently have teams of installers, but rather opts to train a given community's preferred flooring installer. The interactions with these installers have been extremely beneficial and have catalyzed updates in installation best practices, preferred ancillary products, and the design of Fall Defense™ panels themselves. These updates have reduced installation scrap, reduced time and cost to install Fall Defense™, and improved overall system performance.

During focus groups at the 2022 AHCA/NCAL and LeadingAge national conferences, the ability of Fall Defense™ to accommodate floor covering reinstallations was discussed and identified as a potentially valuable, if not necessary, feature of the system. This was trialed and validated in January 2023 when Viconic contracted an installer to remove a previously installed vinyl floor covering and reinstall a new floor covering. The Viconic layer was undamaged and the new floor covering was installed without issue. This process was carried out at several other provider partner communities with broadloom carpet, modular carpet, and luxury vinyl tile. In all cases, Fall Defense™ was undamaged during the process, further confirming the system can be used through several flooring lifecycles.

The feedback and collected fall data from Viconic's provider partners have been generally positive and insightful. Summaries of the feedback and fall data can be seen in the following section.

### Provider Partner Fall Report Data

Viconic has established provider partnerships with several senior care communities across the country, including communities in Georgia, Indiana, Michigan, Minnesota, Montana, North Carolina, Ohio, Pennsylvania, and Virginia. These care communities provide several levels of care, but the suites with Fall Defense™ installations are primarily in Assisted Living, Memory Care, and Skilled Nursing environments. The communities typically opted to install Viconic in the resident's bedroom, private living space, and bathroom. A multitude of floor coverings were chosen by the communities including modular carpet, broadloom carpet, sheet vinyl, and luxury vinyl tile. As of September 2026, Viconic has been installed in sixteen senior care communities including a "behind the door" installation in Red Wing, Minnesota. This installation will provide great insight into the benefits of including Fall Defense™ in corridors and common spaces. Figure 1 shows the falls and injuries reported throughout the communities from January 2021 to August 2026.

|                                                 | Without<br>Fall Defense™ | With<br><b>VICONIC®</b><br>FALL DEFENSE™ |
|-------------------------------------------------|--------------------------|------------------------------------------|
| Rooms                                           | 537                      | 74                                       |
| Total Falls                                     | 2973                     | 624                                      |
| Injuries from Falls (Minor & Major)             | 570                      | 72                                       |
| Percentage of Falls with Injury (Minor & Major) | 19.2%                    | 11.5%                                    |
| Falls with Major Injury                         | 122                      | 3                                        |
| Percentage of Falls with Major Injury           | 4.1%                     | 0.5%                                     |
| Fall Related ER Visits                          | 185                      | 11                                       |
| Percentage of Falls with ER Visit               | 6.2%                     | 1.8%                                     |

Figure 1: Composite Provider Partner Fall Data

**Analysis** - Provider partners were encouraged to choose, and generally selected, higher fall risk residents in the community to occupy the Viconic suites. As a result and as expected, the fall rates are generally higher in the Viconic suites compared to the rest of the community. Despite this, injury rates, rate of Falls with Major Injury (FMI), and rates of ER visits are much lower in the Viconic suites compared to the baseline. Rates of injury, FMI, and ER visits were reduced by 40%, 88%, and 72%, respectively with the addition of Fall Defense™. The most common injuries reported in Viconic suites were skin tears, abrasions, and lacerations. These injuries may be less severe with Fall Defense™ but are not necessarily prevented by it.

**Summary** - The observed fall outcomes reported by the provider partner sites have been positive as anticipated. To date, rates of injury, FMI, and ER visits have been reduced by 40%, 88%, and 72%, respectively, with the addition of Fall Defense™. Despite the Viconic suites housing high fall-risk residents who have experienced numerous falls, the facilities have observed only one fracture and no other reported injuries worse than an AIS 2 moderate injury to date in suites installed with Viconic Fall Defense™. The feedback from installers, facility management, and residents living in the suites has been very positive. Interviews highlighted that residents and management enjoy the peace of mind offered by Viconic all while having no reported negative effects on daily activities. Additionally, the maintenance departments have reported no disruptions in their ability to carry out routine maintenance in suites with Fall Defense™. Finally, the system's return on investment is higher than initially anticipated since one or more floor coverings may be installed over the initial Viconic installation.

**Note** - Fall Defense™ will not prevent all injuries, but rather reduce the risk and severity of injuries. In the three FMIs recorded on Viconic, all residents were able to make a full recovery, return to their apartments, and resume normal activities. Other than temporary time in rehabilitation, neither resident had to move to a higher level of care as a result of the fall.

## Methodology, Test Methods, Results, and Analysis Overview

The data presented below demonstrates the effectiveness of Fall Defense™ as installed in a lab environment. All lab evaluations were completed with a commercial vinyl sheet over a rigid concrete base. Six industry-accepted test devices were used to quantify the performance of the flooring systems for reduction in risk of TBI or head injury, reduction in risk of body injury, reduction in risk of hip fracture, surface firmness, surface stability, and comfort underfoot. Viconic was also evaluated in an acoustics lab to quantify the sound transmission benefits provided by Fall Defense™. This report provides an overview of the test methods, methodologies, results, and analysis. Additional tests outside the scope of this report were also conducted to determine flammability properties, smoke density properties, static load limits, compression and recovery, and airborne sound transmission loss. Details and results of these evaluations can be found in the Appendix.

Head Impact Testing: Falls often result in TBI. Performance testing to quantify the risk of TBI was conducted using an ASTM F355 E Missile and a NHTSA FMVSS201u Hybrid III free motion head form (FMH). The impactors have a mass of 4.5 kg and impacted the flooring surfaces at a velocity of 3.4 m/s. This velocity corresponds to a freefall height of 0.6 m and was selected based on relevant clinical fall data.<sup>13</sup> The test devices report a resultant Head Injury Criterion (HIC) and  $HIC_d$  for the ASTM head form and Hybrid III FMH, respectively. Lower HIC and  $HIC_d$  values indicate a reduction in risk of injury.

Body Impact Testing: Falls often result in injuries to various parts of the body. Performance testing to quantify the risk of body injury was conducted using an ASTM F355 A-Missile, a device commonly used to evaluate safety in sporting surfaces. The cylindrical missile has a mass of 9.1 kg, a diameter of 127 mm and achieves an impact velocity of 3.4 m/s. The device reports the peak G value (GMAX) the device experiences from an impact with the flooring surface. Lower GMAX values indicate a reduction in risk of injury.

Hip Impact Testing: Falls often result in hip fractures. Performance testing to quantify the reduction in risk of hip fracture was conducted at the University of Waterloo per CSA EXP08-17. The mechanical hip impact simulator approximates a 50th percentile older female falling on her hip at 2.8 m/s. The impact is concentrated on the greater trochanter and peak load is measured at the femoral neck where the vast majority of hip fractures occur during a fall. The key output is the percentage of force attenuation at the femoral neck. Higher levels of force attenuation indicate a reduction in the risk of hip fracture.

Mobility/Stability Testing: Flooring surfaces that are too soft may increase the occurrence of falls or restrict mobility. Performance testing to quantify the firmness and stability of surfaces was conducted using the Rotational Penetrometer. The device simulates the loading of a wheelchair caster and measures the depth of penetration before and after a 360° rotation to determine firmness and stability, respectively. Acceptable levels lie below 7.6 mm for a surface to be considered firm and 12.7 mm for a surface to be considered stable.

Surface Comfort Testing: Comfort underfoot is important to caregivers and residents. Performance testing to quantify the relative comfort underfoot was conducted using the Advanced Artificial Athlete (AAA). The AAA measures both force reduction and energy return compared to a concrete surface. The device outputs are percent force reduction (FR) and percent energy restitution (ER) compared to a bare concrete baseline. Higher force reduction and lower energy restitution are preferred since concrete has 0% force reduction and 100% energy restitution.

Acoustics Testing: Reduction of sound transmission through floors of vertically adjacent rooms is a major consideration during the design and construction of senior living communities. Standard tests involving two test rooms, tapping machines, and microphones were conducted to quantify the sound absorption properties of the Viconic subfloor. These tests output an Impact Insulation Class (IIC), Sound Transmission Class (STC), the improvement in Impact Insulation Class ( $\Delta$ IIC), and High-Frequency Impact Insulation Class (HIIC).

## Head Impact Testing, Description, and Analysis

The Abbreviated Injury Scale (AIS) is the primary tool used by scientists to assess the probability and severity of injury from minor to “maximum” or fatal. Figure 2 shows the AIS injury severity scale for head injuries.

| AIS | Severity Code                   | Fatality Rate |
|-----|---------------------------------|---------------|
| 1   | Minor                           | 0%            |
| 2   | Moderate                        | 0.1% - 0.4%   |
| 3   | Serious                         | 0.8% - 2.1%   |
| 4   | Severe                          | 7.9% - 10.6%  |
| 5   | Critical                        | 53.1% - 58.4% |
| 6   | Maximum (currently untreatable) | -             |

Figure 2: AIS Injury Severity Scale

| AIS Severity | Injury               |
|--------------|----------------------|
| 1            | None                 |
| 2            | Headache, Dizziness  |
| 3            | Unconscious < 1 hr   |
| 4            | Unconscious 6-24 hrs |
| 5            | Unconscious > 24 hrs |

Figure 3: AIS vs Loss of Consciousness

Caregivers often assess AIS severity post trauma by the length of time the victim experiences a loss of consciousness as detailed in Figure 3. AIS Level 1 would be described as moderate concussion without loss of consciousness. Level 5 would be a critical injury resulting in a coma. Level 6 is maximum or fatal.

The severity of head injuries is directly related to the magnitude of the deceleration and the duration of an impact event. Headforms with incorporated accelerometers have been developed to evaluate the deceleration-time response for use as a predictive tool in a lab environment. These devices have been correlated to human test subjects and aid scientists in determining the AIS severity during a simulated impact event. The device output is Head Injury Criterion (HIC).

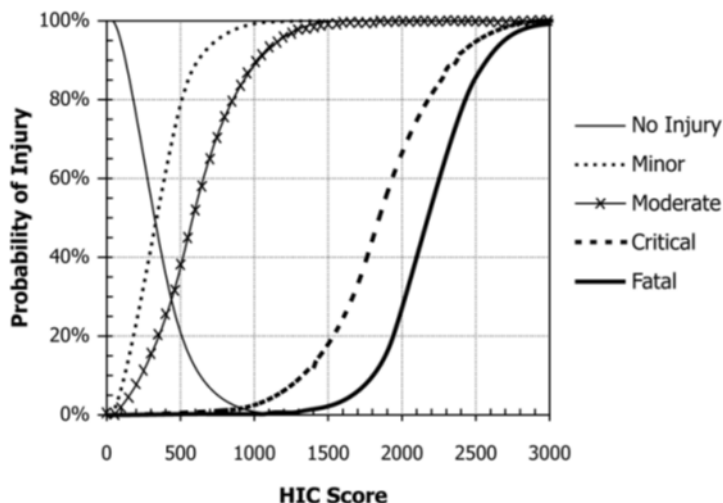


Figure 4: Probability for a Specific Head Injury for a Given HIC

The Society of Automotive Engineers (SAE) uses HIC to correlate the measured HIC from a simulated event to the probability and severity of the type of injury (as detailed in Figure 4) where levels 1, 2, 5 and 6 are shown as minor, moderate, critical, and fatal. The resultant HIC from a test can be used to determine the probability for risk of a specific AIS injury by identifying the y-value of the risk curve at the measured x-value (HIC). For example, a HIC of 1000 represents a 3% probability of critical injury and a 90% risk of moderate injury whereas a HIC of 500 represents less than 0.5% probability of critical injury and only a 40% chance of moderate injury.

### ASTM F355E HIC Impact Attenuation

An independent test lab was contracted to evaluate the head impact attenuation properties of Viconic Fall Defense™ using the ASTM F355 E-Missile (Figure 5). This device is commonly used for assessing playground surfaces globally per ASTM F1292. It lacks a human-like skin but outputs a worst-case (HIC) from a surface impact. The impact mechanism consists of a 10 lb hemispherical aluminum missile equipped with a tri-axial accelerometer that has adjustable drop-height capability. The HIC value is calculated from an integration of the acceleration-time graph during an impact. Lower HIC values are indicative of lower risk of injury. Furthermore, HIC values under 1000 are desired and required under federal standards. At a HIC value of 1000, there is very high risk of moderate head injury and a 3% chance of critical injury. The probability of critical injury increases exponentially as HIC scores increase above 1000. Figure 6 compares the HIC response of the flooring systems at a drop height of 0.6 m.

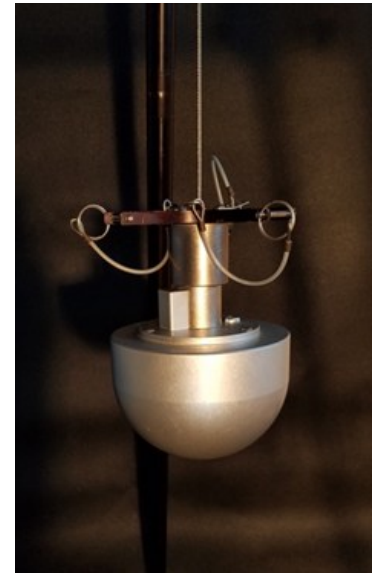


Figure 5: ASTM F355 E Missile

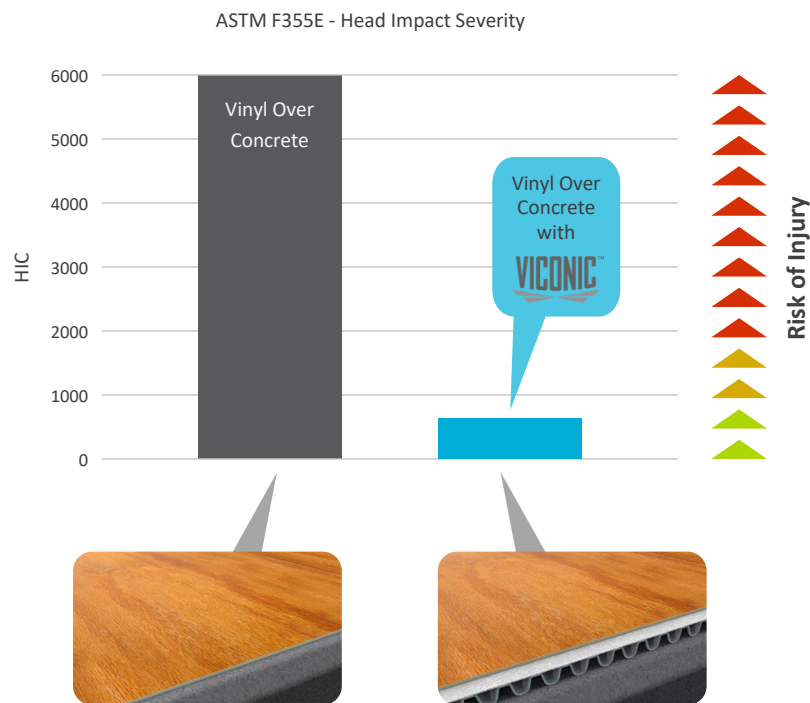


Figure 6: E Missile HIC Results

**Analysis** - Figure 6 clearly shows that the Viconic system substantially lowers HIC values and reduces the risk of injury compared to the baseline system when tested over concrete. The baseline vinyl system is more than six times the federal HIC limit of 1000, whereas the Viconic Fall Defense™ system under vinyl (695 HIC) is well under the federal limit. The Viconic system clearly demonstrates the potential to substantially reduce the risk of TBI and critical injuries.

### Hybrid III HIC<sub>d</sub> Impact Attenuation

The FMVSS201u Hybrid III free motion headform (FMH), as shown in Figure 7, is the test device specified by the National Highway Traffic Administration (NHTSA) for determining the risk of head injury inside all passenger vehicles sold in the US. The test device consists of a 4.54 kg (50th percentile male) Hybrid III aluminum headform with human-like rubber skin and is equipped with a tri-axial accelerometer. The device output, HIC<sub>d</sub>, is similar to HIC but takes into account movement of the neck during impact.



Figure 7: 50th Percentile Male Hybrid III FMH

North American automotive OEMs are required to test their vehicles per Federal Motor Vehicle Safety Standard 201u and provide a report showing that all impact points tested within the vehicle upper interior result in HIC<sub>d</sub> values less than 1000. Vehicles which do not provide ample protection and fail to meet this test criterion cannot be sold in the US market. Figure 8 compares the HIC<sub>d</sub> response of the two flooring constructions.

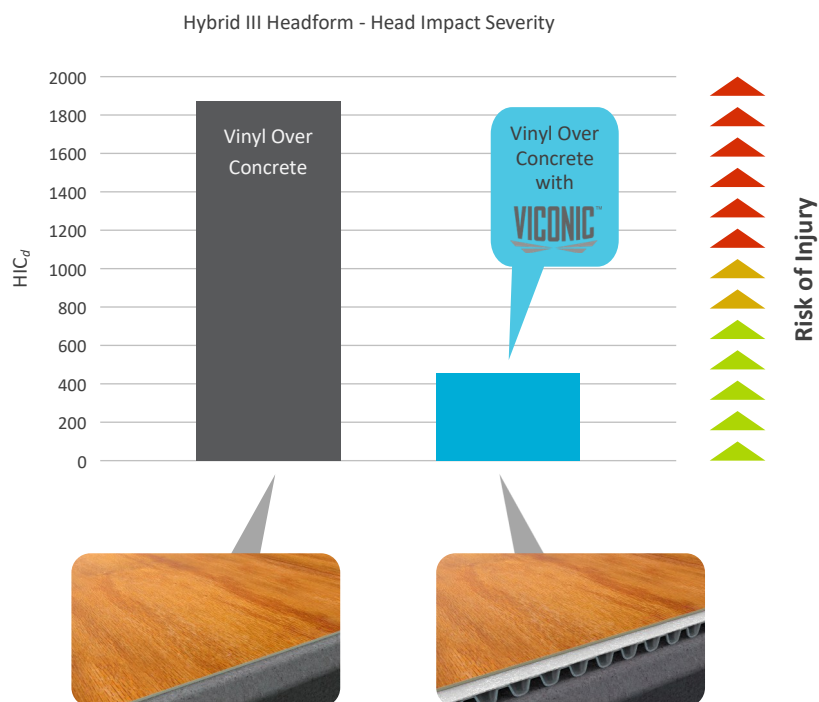


Figure 8: Hybrid III FMH HIC<sub>d</sub> Results

**Analysis** - Figure 8 clearly shows that the Viconic system substantially reduces the risk of injury and lowers HIC compared to the baseline vinyl system over concrete at a 0.6 m drop height. The vinyl system (1875 HIC<sub>d</sub>) would present a 25% probability of an AIS 5 critical injury and over 95% probability of an AIS 4 severe injury. Viconic under vinyl (415 HIC<sub>d</sub>) represents less than 1% probability of AIS 5 critical injury and only 40% probability of moderate injury. The Viconic system demonstrates a roughly 20-fold reduction in risk of critical and moderate head injury when compared to the baseline system.

## Body Impact Testing, Description, and Analysis

An independent test lab was contracted to evaluate the body impact attenuation properties of Viconic Fall Defense™ using the ASTM F355 A-Missile, which has long been used in North America to gauge the hardness and safety of synthetic turf playing surfaces. The device, shown in Figure 9, is a 9.1 kg test missile with a 127 mm flat bottom. The device outputs GMAX, the maximum deceleration experienced during a drop as a multiple of gravitational acceleration, g. Fields that fail to achieve a GMAX of less than a limit of 200 are deemed unsafe for play. Playing surfaces above this stiffness demonstrate increased risk for bodily injury due to falls onto the surface. Lower values of GMAX during falls are generally considered to present a lower risk of bodily injury. The test protocol requires that the missile be dropped three times from a height of 0.61 m. The first drop is a conditioning drop; the last two drops are averaged and reported. Figure 10 compares the response of the flooring systems studied here.



Figure 9: ASTM F355 A Missile



Figure 10: F355 A Missile GMAX Results

**Analysis** - Figure 10 clearly shows that the Viconic system substantially reduces the risk of body injury compared to the baseline vinyl system (545 GMAX). The Viconic system under vinyl (212 GMAX) was substantially closer to, but remained slightly above the 200 GMAX criterion used for synthetic-turf playing surfaces. The Viconic system's GMAX values are less than half that of the baseline system and demonstrate the capability of substantially reducing the frequency and severity of body impact injuries, including fractures, when compared to the baseline system.

## Hip Impact Testing, Description, and Analysis

The University of Waterloo Injury Biometrics and Aging Laboratory (IBAL) conducts novel research related to the biomechanics of balance, mobility, falls, and fall-related impacts. IBAL was contracted to perform impact testing on Viconic Fall Defense™ using their mechanical hip impact simulator. The baseline vinyl and Viconic systems were tested at an impact velocity of 2.8 m/s, which is determined as most relevant by IBAL.

The device is composed of a mechanical surrogate pelvis including a simulated hip bone and surrounding soft tissues that mimic the characteristics of an average older female. The pelvis is mounted on a vertical guide track as illustrated in Figure 11 (courtesy of the University of Waterloo). The surrogate pelvis and carriage are dropped onto the test samples which are attached to a steel force plate to capture ground reaction forces.

The surrogate pelvis is illustrated in Figure 12. It includes a synthetic femur encased in foam and affixed to a load cell at the base of the femoral neck. The load cell is also fixed to a base plate and pelvic springs tuned to match the flexure of an average older female. The load cell captures the forces during an impact on the femoral neck region, the most common location of hip fracture. CSA EXP08-17 details a device that was developed by research institutions and calibrated to simulate a 50th percentile female falling on her hip. The CSA test protocol is being used by leading research institutions, including the University of Waterloo, to evaluate wearable padding and safety flooring products to determine the reduction in load on the femoral neck during a fall. The resulting reduction in femoral-neck force is used to estimate the reduction in hip-fracture risk.

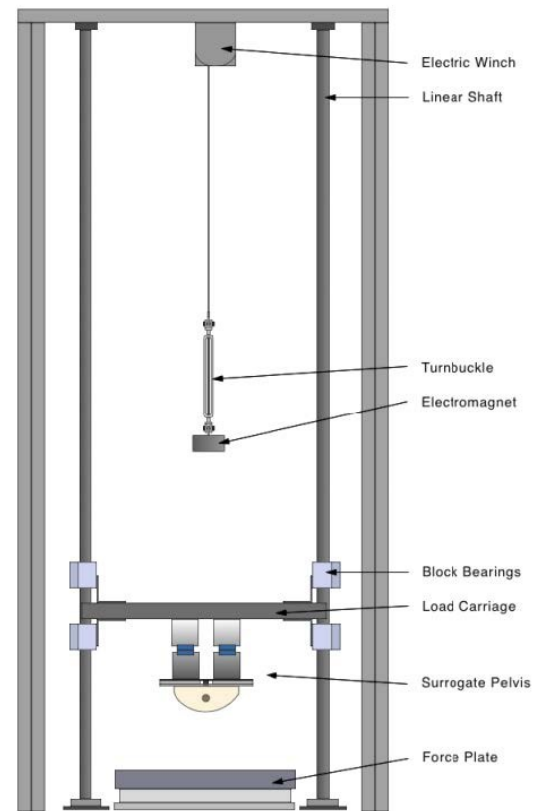


Figure 11: IBAL Mechanical Hip Impact Simulator

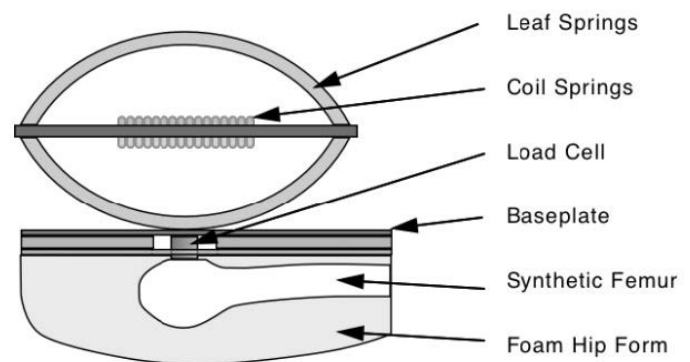


Figure 12: IBAL Surrogate Pelvis

The data outputs from the mechanical hip impact simulator were analyzed by IBAL at the University of Waterloo. The output most relevant to fracture risk is the femoral neck force attenuation percentage. Research shows that reducing the load on the femoral neck during a fall reduces the probability, risk, and severity of hip fractures. Higher levels of force attenuation (FA) reduce the fracture risk. Figure 13 compares the response of vinyl only (Peak Femoral Neck Force of 2,251 N and 0% FA) compared to the same vinyl over Viconic (Peak Femoral Neck Force 1,843 N and 18.2% FA).

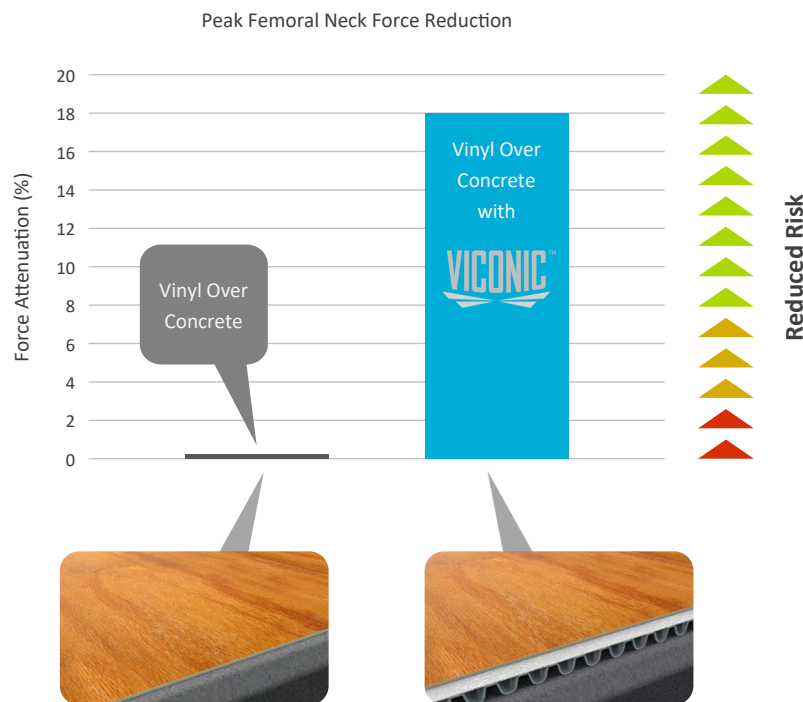


Figure 13: IBAL Surrogate Pelvis Peak Femoral Neck Force Attenuation Percentage Test Results

**Analysis** - The 18.2% peak femoral neck force attenuation percentage provided by the Viconic Fall Defense™ system is particularly significant because the fracture threshold for older female femurs are in the range of 2,000-3,000 N.<sup>14</sup> A reduction of 18% or 408 N is quite substantial given that vinyl-only baseline result (2,251 N) is within the fracture range for the average older female whereas vinyl with Viconic Fall Defense™ (1,843 N) is below that fracture range.

Recently, a probabilistic model was developed at the University of Waterloo that predicts normalized factor of risk (FOR) of hip fracture based on a simulated population of 100,000 individuals representing the Canadian older adult population. The subject characteristics that impact the hip fracture FOR for an older individual include bone density, age, mass, and sex.<sup>15</sup> In general terms, the subject FOR generally increases with: decreasing bone density, increasing age, decreasing mass, and female sex. The 18.2% force attenuation that Viconic Fall Defense™ provides would translate to an average relative reduction of 55% in the number of hip fractures for males, and an average relative reduction of 21% in the number of hip fractures for females when applied to the probabilistic model. FOR may be higher or lower depending on the individual subject.

## Mobility and Stability Testing, Description, and Analysis

Energy absorbing flooring surfaces may absorb impact energy and reduce risk of injury, but if they are too soft, they can restrict mobility and increase the occurrence of falls. Performance testing to quantify the firmness and stability of surfaces was conducted using the Rotational Penetrometer in Figure 14. The device simulates the loading of a wheelchair caster and measures the depth of penetration statically (firmness) and after a 360° rotation (stability). Deformation must be below 7.6 mm for a surface to be considered firm and 12.7 mm for a surface to be considered stable. Although the addition of an energy absorbing underlayment increased the measured deflection for both firmness and stability, all values still fell well within the criteria for a firm and stable flooring surface. Figures 15 and 16 compare the firmness and stability of four flooring systems.



Figure 14: Rotational Penetrometer

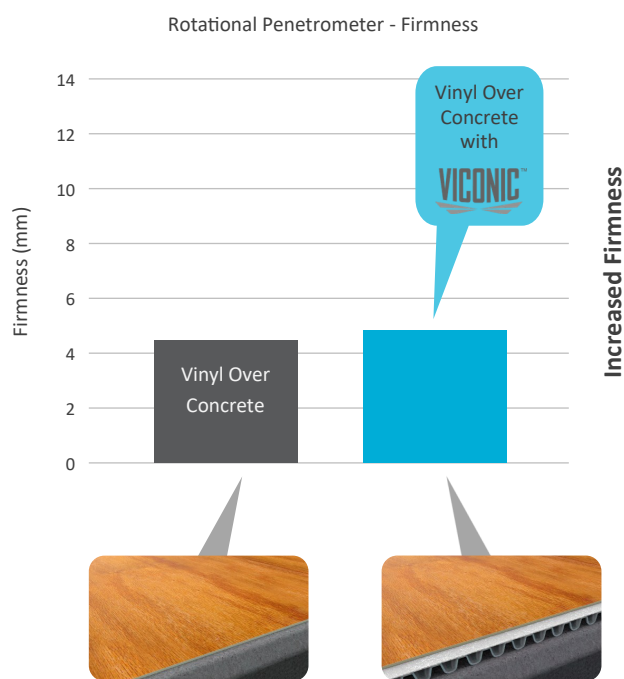


Figure 15: Rotational Penetrometer Firmness

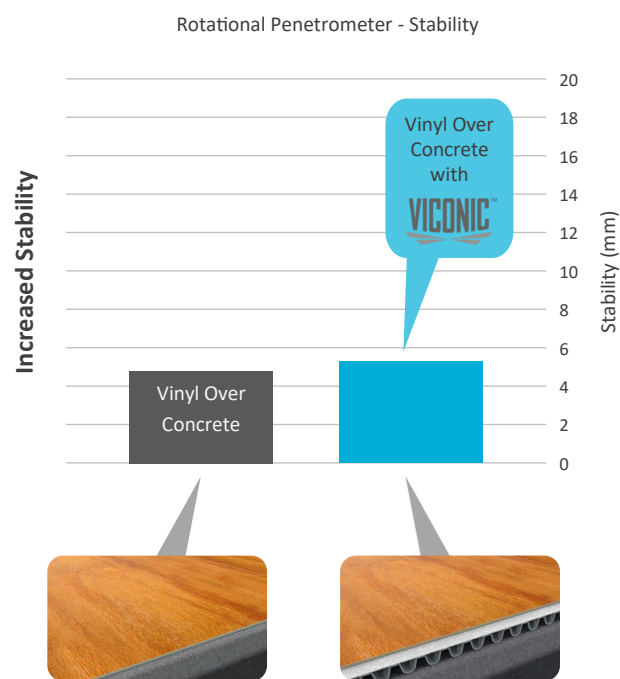


Figure 16: Rotational Penetrometer Stability

**Analysis** - The data above shows that all flooring systems are below the 7.6 mm of deflection required to be considered firm and below the 12.7 mm of deflection required to be considered stable.

## Surface Comfort Testing, Description, and Analysis

An independent test lab was contracted to evaluate the surface comfort properties of Viconic Fall Defense™ using an Advanced Artificial Athlete. The AAA accurately measures the force reduction (FR) and energy restitution (ER) of flooring and sports surfaces. The AAA, shown in Figure 17, uses a drop mechanism with an incorporated accelerometer and a spring designed to mimic a human footfall. The AAA registers acceleration as a function of time throughout interaction with the flooring surface. Three drops are completed in a test series. The first drop is a conditioning drop, and the average FR and ER of the second and third drops are measured and reported.

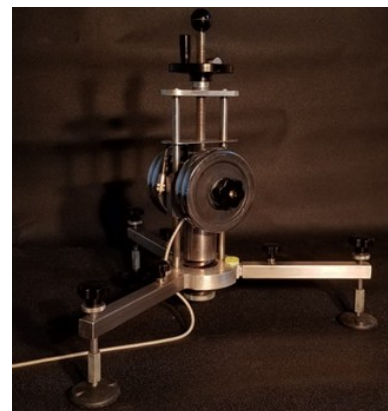


Figure 17: Advanced Artificial Athlete

**Force Reduction** - The percentage of force reduction (FR) is a relative comparison between the flooring surface and bare concrete. Concrete has 0% force reduction, meaning all the force of the footfall is absorbed by the body. Higher levels of force reduction from flooring surfaces lend to greater comfort underfoot. Figure 18 compares the force reduction properties of the two flooring systems.

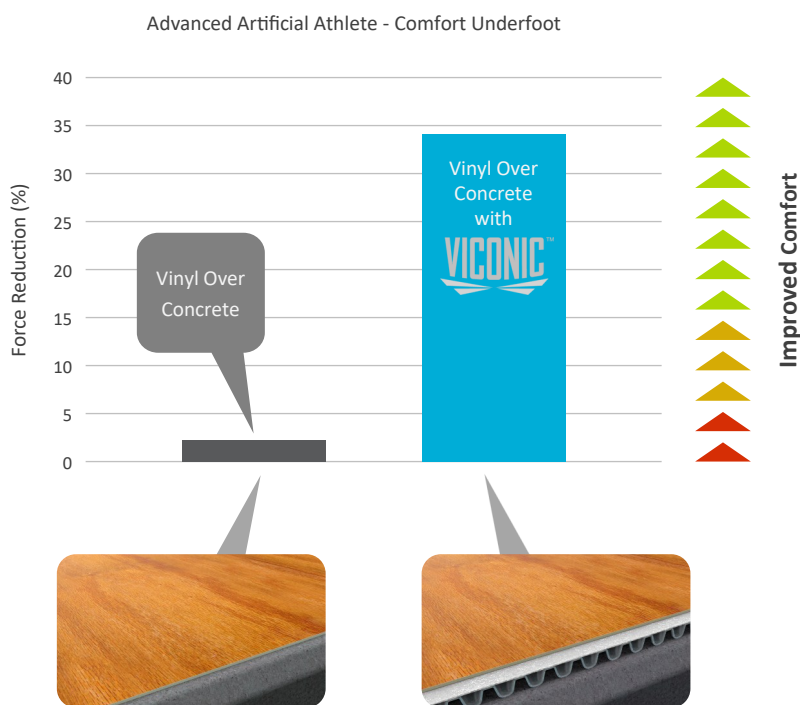


Figure 18: AAA Force Reduction Results

**Analysis** - Figure 18 clearly shows that the Viconic Fall Defense™ system provides greater force reduction and therefore greater comfort underfoot compared to flooring without Viconic. The baseline vinyl system (1% FR) is well below the same system with Viconic (34% FR). Absorbing a substantial amount of the force from a footfall means Viconic systems provide greater comfort underfoot for older adults and caregivers.

Energy Restitution - The percentage of energy restitution (ER) is another measure of surface comfort underfoot which is measured relative to bare concrete. Concrete returns approximately 100% of the incoming energy so its ER is 100%. Floor coverings provide some level of energy restitution, meaning you receive a percentage of the impact force back from the surface. Lower percentages of energy restitution indicate greater comfort underfoot.

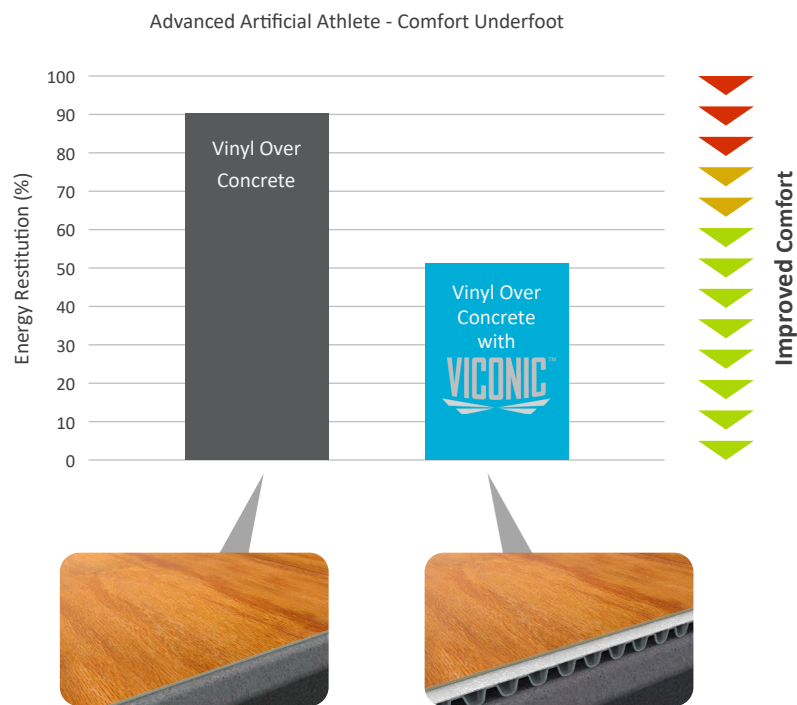


Figure 19: AAA Energy Restitution Results

**Analysis** - Figure 19 clearly shows that Viconic systems provide lower ER than traditional flooring systems without Viconic. The baseline vinyl sheet (96% ER) is substantially higher than the same flooring combined with Viconic (51% ER). Returning less energy during footfall indicates greater comfort underfoot with Viconic systems for older adults and caregivers.

## Acoustics Testing, Description, and Analysis

Although Viconic Fall Defense™ was designed to reduce the risk of fall-related injuries in the aging population, it has several secondary benefits, one of which is improved facility acoustics. The sound environment of communities affects the physical and mental health of the elderly.<sup>16</sup> Evaluations were conducted to evaluate the effectiveness of Viconic Fall Defense™ as a noise reduction product. Two subfloors were considered: a 152 mm concrete slab and a 457 mm open web truss. Additionally, two floor coverings were evaluated: 2.2 mm commercial grade sheet vinyl and 5.5 mm commercial-grade carpet tile. Four metrics are calculated to quantify the sound transmission properties of the flooring products: Impact Insulation Class (IIC), High-Frequency Impact Insulation Class (HIIC), Delta Impact Insulation Class ( $\Delta$ IIC), and Sound Transmission Class (STC).

The impact sound transmission test was conducted in accordance with the ASTM E492 test method. The data obtained from this test is used to calculate Impact Insulation Class (IIC) and High-Frequency Impact Insulation Class (HIIC) in accordance with ASTM E989 and ASTM E3222, respectively. Higher values of IIC and HIIC correlate to better insulation performance. An IIC rating of 50 and above is required in most commercial in building code. HIIC is a relatively new metric used to determine the efficiency of flooring products to reduce high-frequency sound transmission.

The delta impact insulation test was conducted in accordance with the ASTM E2179 test method. This method also dictates how the data is used to calculate Delta Impact Insulation Class ( $\Delta$ IIC). Delta IIC highlights what a flooring product adds to an assembly in terms of isolating impact footfall noise. The procedure starts by testing the baseline concrete subfloor with no flooring products installed. The Viconic Fall Defense™ and floor covering is then installed and the test is then repeated. The difference in IIC values is calculated and reported as  $\Delta$ IIC. Higher values of  $\Delta$ IIC indicate increased abilities of flooring products to reduce sound transmission.

### Impact Insulation Class

Viconic Fall Defense™ was evaluated by an independent test lab to determine Impact Insulation Class (IIC) over two subfloor systems commonly used in commercial construction, 152 mm concrete slab and 457 mm open web truss. Additionally, two flooring systems were adhered to the Viconic layer and evaluated, 2.2 mm commercial vinyl sheet and 5.5 mm commercial carpet tile. To measure IIC, the test uses two vertically adjacent rooms, a source room and a receiving room where the source room is located above the receiving room with the floor/ceiling assembly acting as a barrier. A standardized tapping machine taps the floor of the source room and microphones in the receiving room measure the sound levels at predetermined frequencies. Lower levels of measured sound pressure signify less sound transmission between rooms. Impact sound pressure is plotted against frequency and the IIC rating is calculated. Figures 20 and 21 show the performance of Viconic Fall Defense™ in conjunction with vinyl sheet and carpet over a concrete subfloor and open web truss subfloor, respectively.

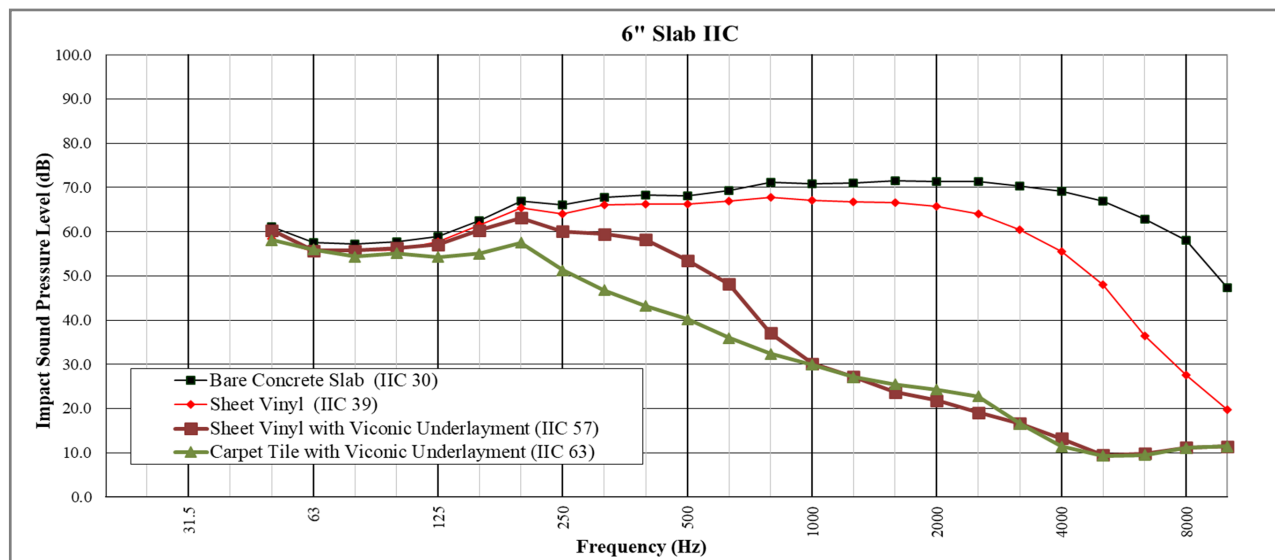
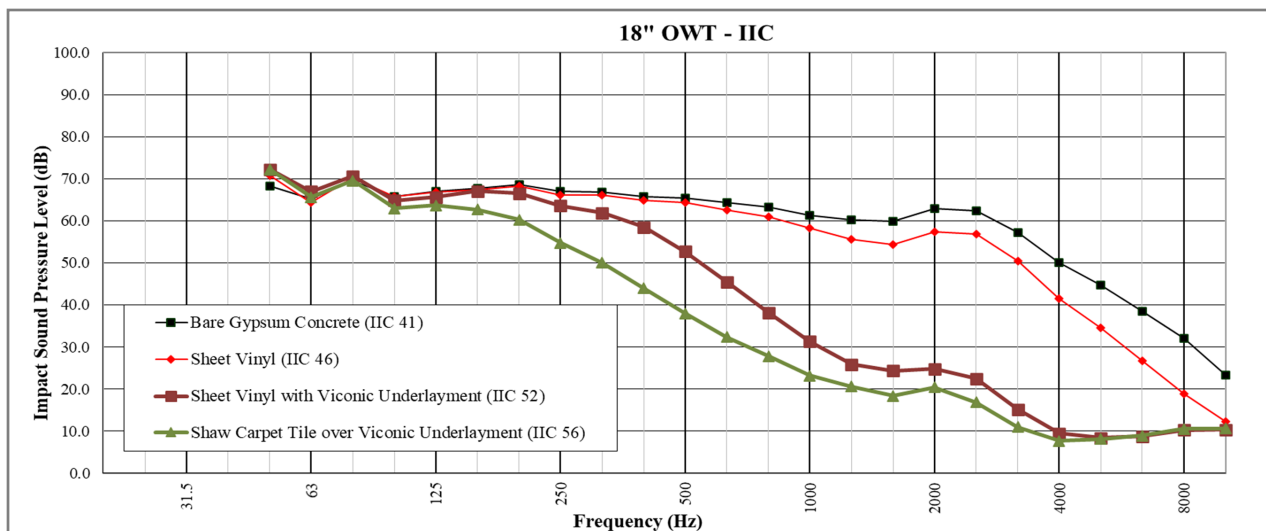


Figure 20: IIC Curves with Concrete Substrate

**Analysis** - Figure 20 clearly shows the acoustic benefits provided by Viconic Fall Defense™. Lower curves indicate significantly less sound transmission from the source room into the receiving room. Although the curves are largely similar in lower frequencies, Viconic shows a substantial improvement in mid- to high-frequency range. Lower frequencies are typical of “thud” type impacts from the source room such as dropped objects or someone walking heavily on their heels. The mid to high frequencies are typically associated with “click” type impacts such as the sound of walking in hard-soled shoes. Viconic’s ability to reduce noise transmission in the mid to high frequencies has a significant effect in IIC ratings. The concrete baseline increased from 30 IIC to 39 IIC with the addition of a commercial grade vinyl sheet. The same floor covering combined with a Viconic Fall Defense™ increased the IIC value to 57, a 46% improvement. Furthermore, combining Viconic with a commercial grade carpet provided an IIC rating of 62, more than doubling the IIC value of the concrete baseline.



**Figure 21: IIC Curves with Open-Web Truss Substrate**

*Analysis* - Figure 21 shows that adding Viconic Fall Defense™ also improves acoustics when using an open web-truss subfloor construction. The subfloor without any floor covering had an IIC rating of 41 which increased to 46 IIC with the addition of a commercial vinyl sheet. The same vinyl sheet combined with Viconic increased the IIC value to 52, a 13% improvement. As seen with the concrete subfloor construction, combining Viconic with a commercial grade carpet further reduced sound transmission between rooms, improving to 56 IIC, a 37% improvement compared to the baseline subfloor.

### High-Frequency Impact Insulation Class

The same test procedure used to determine IIC is used to determine High-Frequency Impact Insulation Class (HIIC); however, only high frequency pressure levels are used in the calculations, specifically 400 Hz to 3,150 Hz. HIIC better highlights the acoustical improvements provided by flooring and underlayments compared to IIC. This test was conducted only over a 152 mm concrete slab subfloor. Figure 22 shows the results of the HIIC test and highlights the frequencies used to calculate HIIC.

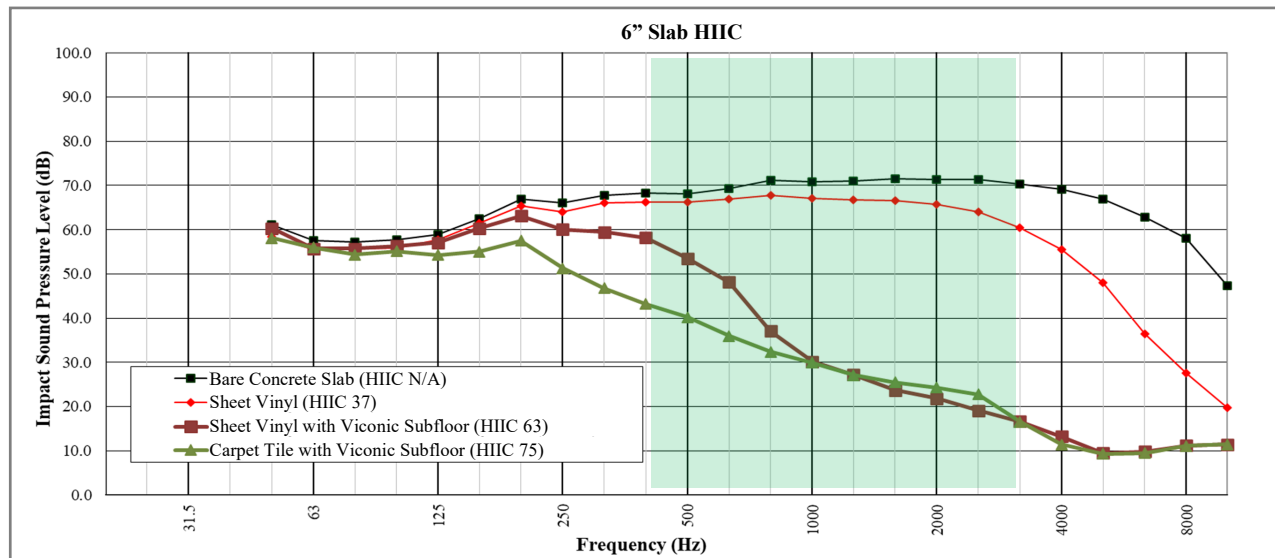


Figure 22: HIIC Test Results

**Analysis** - Figure 22 shows the significant performance improvement offered by the Viconic Fall Defense™ system when focused on high-frequency sound transmission. HIIC for commercial-grade sheet vinyl was increased from 37 to 63 with the addition of Viconic, a 70% performance improvement. Implementing a commercial grade carpet further improved acoustic properties, increasing the HIIC value to 75, more than doubling the HIIC value of vinyl over concrete. These results clearly highlight the ability of Viconic to improve facility acoustics and increase quality of life for residents.

### Delta Impact Insulation Class

Delta Impact Insulation Class ( $\Delta$ IIC) highlights a flooring product's ability to reduce sound transmitted between rooms such as footfall noise. The test compares a baseline concrete subfloor to the fully installed flooring system and reports the difference in IIC where the  $\Delta$ IIC for bare concrete is zero. Delta IIC is the best sound rating to consider when comparing the performance of different types of flooring underlayments. Figure 23 shows the improvement in IIC provided by the addition of Viconic Fall Defense™.

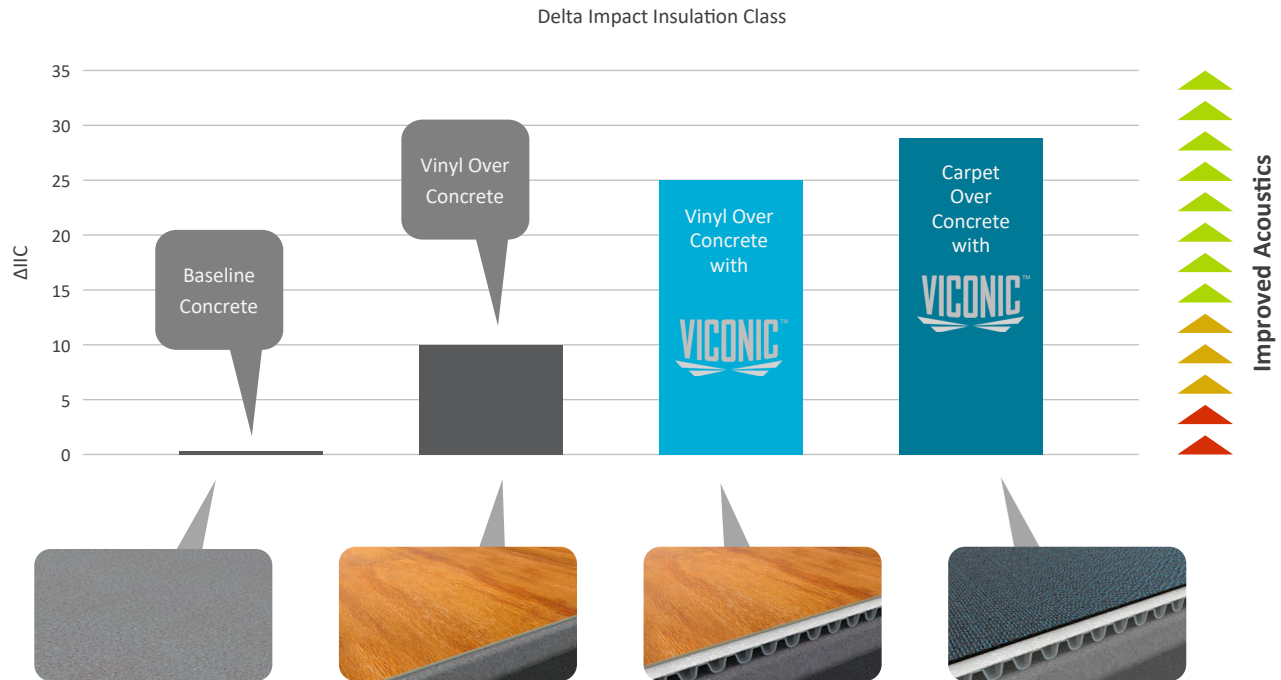


Figure 23: Delta IIC Test Results

**Analysis** - As demonstrated with the IIC and HIIC, Viconic has a much more favorable  $\Delta$ IIC when compared to a traditional flooring system. By definition, the  $\Delta$ IIC of a bare concrete subfloor is zero. The addition of a commercial grade sheet vinyl had a calculated  $\Delta$ IIC value of 10. The addition of Viconic Fall Defense™ to the vinyl system increased  $\Delta$ IIC to 25, a 150% performance increase. Utilizing a commercial grade carpet as the floor covering offered further improvements, increasing  $\Delta$ IIC to 29, approximately 2.9 times the baseline value. These results highlight the ability of Viconic to reduce impact sound transmitted between rooms and provide a safer and more comfortable living environment for residents.

**Summary** - The results of these acoustic tests are particularly significant due to commercial building codes. Most new construction is required to meet or exceed an IIC rating of 50. Depending on subfloor construction and floor covering used, the installed system may need an acoustic barrier to meet code. The inclusion of Viconic Fall Defense™ improves IIC to acceptable levels all while reducing risk of fall-related injuries and improving comfort underfoot.

## Conclusion

Fall related-injuries in the elderly, such as hip fracture and TBI, can reduce mobility and independence and be potentially life threatening or fatal. The \$50 billion annual financial burden associated with fall-related injuries in the US market alone presents a unique opportunity for the flooring industry to develop and supply innovative systems. Safety flooring systems like Viconic Fall Defense™ presented above demonstrate the capability to substantially reduce the risk of injury and death due to impacts with the flooring surface. While the results may vary slightly when combined with compatible floor coverings, the statistical analysis of commercial sheet vinyl combined with Viconic systems in general demonstrate:

- 40% reduction in rate of injury based on collected fall data
- 88% reduction in rate of FMI based on collected fall data
- 72% reduction in rate of ER visits based on collected fall data
- 20-fold reduction in risk of critical head injury
- 60% reduction in the probability of moderate head injury
- 2.2-fold reduction in GMAX
- 18.2% femoral neck force attenuation during falls for average older females
- 38% average reduction in hip fracture factor of risk for older adults
- Firmness and stability underfoot supporting mobility
- Substantially greater comfort underfoot for caregivers and older adults
- Significant improvement in impact sound transmission through floors

## References

1. US Department of Health and Human Services. *Hospital Inpatient Statistics, 1996-1999*. Rockside, MD: Agency for Health Care Policy and Research; 1999. AHCPR Publication 99-00034.
2. Grisso JA, Kelsey JL, Storm BL, et al. Risk factors for falls as a cause of hip fracture in women. *N Engl J Med*. 1991;324(19):1326-1331.
3. Hedlund R, Lindgren U. Trauma type, age and gender as determinants of hip fracture. *J Orthop Res*. 1987; 5(2):242-246.
4. Schneider EL, Guralnik JM. The aging of America: impact on health care costs. *JAMA*. 1990;263(17):2335-2340.
5. Norton R, Butler M, Robinson E, Lee-Joe T, Campbell AJ. Declines in physical functioning attributable to hip fracture among older people: a follow-up study of case-control participants. *Disabil Rehabil* 2000;22(8):354-351.
6. Wolinsky FD, Fitzgerald JF, Stump TE. The effect of hip fracture on mortality hospitalization, and functional status; a prospective study. *AM J Public Health* 1997;87(3):398-403.
7. Thomas KE, Stevens JA, Sarmiento K, Wald MN. Fall-related traumatic brain injury deaths and hospitalizations among older adults – United States, 2005. *J Safe Res* 2008;39(3):269-272.
8. Coronado VG, Thomas KE, Sattin RW, Johnson RL. The CDC traumatic brain injury surveillance system: characteristics of persons aged 65 years and older hospitalized with a TBI. *J Head Trauma Rehabil* 2005;20(3):215-28.
9. Hoffman, Geoffrey, et al. Incidence of and County Variation in Fall Injuries in US Residents Aged 65 Years or Older, 2016-2019. *JAMA Network Open*, vol. 5, no.2, 2022.
10. Fleisher, Lee A., et al. Health Care Safety During the Pandemic and Beyond - Building a System That Ensures Resilience. *New England Journal of Medicine*, vol. 386, no. 7, 2022, pp. 609-611.
11. Centers for Disease Control and Prevention. (n.d.) *Older Adult Falls: A Growing Problem that can be Prevented* [Fact Sheet]. US Centers for Disease Control and Prevention. [https://www.cdc.gov/steady/pdf/STEADI\\_ClinicianFactSheet-a.pdf](https://www.cdc.gov/steady/pdf/STEADI_ClinicianFactSheet-a.pdf).
12. CNA Financial Corporation. (2022) *Aging Services Claim Report: 11th Edition*. <https://www.cna.com/web/wcm/connect/c6254fff-15ca474e-929d-ca868d402917/CAN-Aging-Services-Claim-Report-11th-Edition.pdf?MOD=AJPERES>.
13. Wright, Alexander D, and Andrew C Laing. The influence of headform orientation and flooring systems on impact dynamics during simulated fall-related head impacts. *Medical Engineering & Physics*, 15 Nov. 2011.
14. Robinovitch, S. N., et al. "Hip Protectors: Recommendations for Biomechanical Testing – an International Consensus Statement (Part I)." *Osteoporosis International*, vol. 20, no. 12, 2009, pp 1977-1988., doi:10.1007/s00198-009-1045-4.
15. Daniel R. Martel, Martin Lysy & Andrew C. Laing (2020) Predicting Population Level Hip Fracture Risk: A Novel Hierarchical Model Incorporating Probabilistic Approaches and Factor of Risk Principles, *Computer Methods in Biomechanics and Biomedical Engineering*, 23:15, 1201-1214, DOI: [10.1080/10255842.2020.1793331](https://doi.org/10.1080/10255842.2020.1793331)
16. Cui P, Zhang J, Li TT. Research on Acoustic Environment in the Building of Nursing Homes Based on Sound Preference of the Elderly People: A Case Study in Harbin, China. *Front Psychol*. 2021 Oct 20;12:707457. doi: 10.3389/fpsyg.2021.707457. PMID: 34744868; PMCID: PMC8563576.

**Appendix A:** Provider Partner Fall Data

**Appendix B:** Viconic Fall Defense™ Product Specification Sheet

|                                                 | Without<br>Fall Defense™ | With<br><b>VICONIC®</b><br>FALL DEFENSE™ |
|-------------------------------------------------|--------------------------|------------------------------------------|
| Rooms                                           | 108                      | 3                                        |
| Total Falls                                     | 1075                     | 38                                       |
| Falls with Injury (Minor & Major)               | 330                      | 13                                       |
| Percentage of Falls with Injury (Minor & Major) | 30.7%                    | 34.2%                                    |
| Falls with Major Injury                         | 65                       | 2                                        |
| Percentage of Falls with Major Injury           | 6.0%                     | 5.3%                                     |
| Fall Related ER Visits                          | 96                       | 2                                        |
| Percentage of Falls with ER Visit               | 8.9%                     | 5.3%                                     |

**Table A1: Indiana Provider Partner Fall Data From Jan 2021 to Aug 2026**  
111-Bed Assisted Living Community

|                                                 | Without<br>Fall Defense™ | With<br><b>VICONIC®</b><br>FALL DEFENSE™ |
|-------------------------------------------------|--------------------------|------------------------------------------|
| Rooms                                           | 62                       | 3                                        |
| Total Falls                                     | 170                      | 22                                       |
| Injuries from Falls (Minor & Major)             | 25                       | 1                                        |
| Percentage of Falls with Injury (Minor & Major) | 14.7%                    | 4.5%                                     |
| Falls with Major Injury                         | 2                        | 0                                        |
| Percentage of Falls with Major Injury           | 1.2%                     | 0.0%                                     |
| Fall Related ER Visits                          | 6                        | 0                                        |
| Percentage of Falls with ER Visit               | 3.5%                     | 0.0%                                     |

**Table A2: Georgia Provider Partner Fall Data From Sep 2021 to Feb 2023**  
65-Bed Assisted Living / Memory Care Community

|                                                 | Without<br>Fall Defense™ | With<br><b>VICONIC®</b><br>FALL DEFENSE™ |
|-------------------------------------------------|--------------------------|------------------------------------------|
| Rooms                                           | 17                       | 3                                        |
| Total Falls                                     | 56                       | 45                                       |
| Injuries from Falls (Minor & Major)             | 25                       | 4                                        |
| Percentage of Falls with Injury (Minor & Major) | 44.6%                    | 8.9%                                     |
| Falls with Major Injury                         | 1                        | 0                                        |
| Percentage of Falls with Major Injury           | 1.8%                     | 0.0%                                     |
| Fall Related ER Visits                          | 0                        | 0                                        |
| Percentage of Falls with ER Visit               | 0.0%                     | 0.0%                                     |

**Table A3: North Carolina Provider Partner Fall Data From Feb 2023 to Aug 2024**  
20-Bed Assisted Living Community

Confidential

|                                                 | Without<br>Fall Defense™ | With<br> |
|-------------------------------------------------|--------------------------|---------------------------------------------------------------------------------------------|
| Rooms                                           | 13                       | 3                                                                                           |
| Total Falls                                     | 284                      | 98                                                                                          |
| Falls with Injury (Minor & Major)               | 63                       | 13                                                                                          |
| Percentage of Falls with Injury (Minor & Major) | 22.2%                    | 13.3%                                                                                       |
| Falls with Major Injury                         | 15                       | 0                                                                                           |
| Percentage of Falls with Major Injury           | 5.3%                     | 0.0%                                                                                        |
| Fall Related ER Visits                          | 21                       | 1                                                                                           |
| Percentage of Falls with ER Visit               | 7.4%                     | 1.0%                                                                                        |

**Table A4: First Minnesota Provider Partner Fall Data From Oct 2023 to Aug 2026**  
16-Bed Memory Care Community

|                                                 | Without<br>Fall Defense™ | With<br> |
|-------------------------------------------------|--------------------------|---------------------------------------------------------------------------------------------|
| Rooms                                           | 71                       | 2                                                                                           |
| Total Falls                                     | 603                      | 31                                                                                          |
| Falls with Injury (Minor & Major)               | 22                       | 3                                                                                           |
| Percentage of Falls with Injury (Minor & Major) | 3.6%                     | 9.7%                                                                                        |
| Falls with Major Injury                         | 9                        | 0                                                                                           |
| Percentage of Falls with Major Injury           | 1.5%                     | 0.0%                                                                                        |
| Fall Related ER Visits                          | 15                       | 0                                                                                           |
| Percentage of Falls with ER Visit               | 2.5%                     | 0.0%                                                                                        |

**Table A5: First Pennsylvania Provider Partner Fall Data From Feb 2024 to Aug 2026**  
73-Bed Skilled Nursing Community

|                                                 | Without<br>Fall Defense™ | With<br> |
|-------------------------------------------------|--------------------------|-----------------------------------------------------------------------------------------------|
| Rooms                                           | 18                       | 22                                                                                            |
| Total Falls                                     | 33                       | 66                                                                                            |
| Falls with Injury (Minor & Major)               | 9                        | 6                                                                                             |
| Percentage of Falls with Injury (Minor & Major) | 27.3%                    | 9.1%                                                                                          |
| Falls with Major Injury                         | 2                        | 0                                                                                             |
| Percentage of Falls with Major Injury           | 6.1%                     | 0.0%                                                                                          |
| Fall Related ER Visits                          | 0                        | 0                                                                                             |
| Percentage of Falls with ER Visit               | 0.0%                     | 0.0%                                                                                          |

**Table A6: Montana Provider Partner Fall Data From Jun 2024 to Aug 2026**  
40-Bed Skilled Nursing Community

|                                                 | Without<br>Fall Defense™ | With<br><b>VICONIC®</b><br>FALL DEFENSE™ |
|-------------------------------------------------|--------------------------|------------------------------------------|
| Rooms                                           | 93                       | 3                                        |
| Total Falls                                     | 80                       | 7                                        |
| Falls with Injury (Minor & Major)               | 18                       | 0                                        |
| Percentage of Falls with Injury (Minor & Major) | 22.5%                    | 0.0%                                     |
| Falls with Major Injury                         | 5                        | 0                                        |
| Percentage of Falls with Major Injury           | 6.3%                     | 0.0%                                     |
| Fall Related ER Visits                          | 8                        | 0                                        |
| Percentage of Falls with ER Visit               | 10.0%                    | 0.0%                                     |

**Table A7: Second Pennsylvania Provider Partner Fall Data From Jan 2025 to Mar 2026**  
96-Bed Personal Care Community

|                                                 | Without<br>Fall Defense™ | With<br><b>VICONIC®</b><br>FALL DEFENSE™ |
|-------------------------------------------------|--------------------------|------------------------------------------|
| Rooms                                           | 96                       | 4                                        |
| Total Falls                                     | 396                      | 30                                       |
| Falls with Injury (Minor & Major)               | 30                       | 1                                        |
| Percentage of Falls with Injury (Minor & Major) | 7.6%                     | 3.3%                                     |
| Falls with Major Injury                         | 10                       | 0                                        |
| Percentage of Falls with Major Injury           | 2.5%                     | 0.0%                                     |
| Fall Related ER Visits                          | 18                       | 0                                        |
| Percentage of Falls with ER Visit               | 4.5%                     | 0.0%                                     |

**Table A8: Second Minnesota Provider Partner Fall Data From Apr 2025 to Aug 2026**  
100-Bed Skilled Nursing Community

|                                                 | Without<br>Fall Defense™ | With<br><b>VICONIC®</b><br>FALL DEFENSE™ |
|-------------------------------------------------|--------------------------|------------------------------------------|
| Rooms                                           | 24                       | 24                                       |
| Total Falls                                     | 121                      | 234                                      |
| Falls with Injury (Minor & Major)               | 31                       | 28                                       |
| Percentage of Falls with Injury (Minor & Major) | 25.6%                    | 12.0%                                    |
| Falls with Major Injury                         | 6                        | 1                                        |
| Percentage of Falls with Major Injury           | 5.0%                     | 0.4%                                     |
| Fall Related ER Visits                          | 12                       | 8                                        |
| Percentage of Falls with ER Visit               | 9.9%                     | 3.4%                                     |

**Table A9: Third Minnesota Provider Partner Fall Data From May 2025 to Aug 2026**  
24-Bed Assisted Living/Memory Care/Hospice Community

|                                                 | Without<br>Fall Defense™ | With<br><b>VICONIC®</b><br>FALL DEFENSE™ |
|-------------------------------------------------|--------------------------|------------------------------------------|
| Rooms                                           | 3                        | 3                                        |
| Total Falls                                     | 78                       | 28                                       |
| Falls with Injury (Minor & Major)               | 7                        | 1                                        |
| Percentage of Falls with Injury (Minor & Major) | 9.0%                     | 3.6%                                     |
| Falls with Major Injury                         | 0                        | 0                                        |
| Percentage of Falls with Major Injury           | 0.0%                     | 0.0%                                     |
| Fall Related ER Visits                          | 2                        | 0                                        |
| Percentage of Falls with ER Visit               | 2.6%                     | 0.0%                                     |

**Table A10: Fourth Minnesota Provider Partner Fall Data From Apr 2025 to Aug 2026**  
20-Bed Skilled Nursing Community

|                                                 | Without<br>Fall Defense™ | With<br><b>VICONIC®</b><br>FALL DEFENSE™ |
|-------------------------------------------------|--------------------------|------------------------------------------|
| Rooms                                           | 32                       | 4                                        |
| Total Falls                                     | 77                       | 25                                       |
| Falls with Injury (Minor & Major)               | 10                       | 2                                        |
| Percentage of Falls with Injury (Minor & Major) | 13.0%                    | 8.0%                                     |
| Falls with Major Injury                         | 7                        | 0                                        |
| Percentage of Falls with Major Injury           | 9.1%                     | 0.0%                                     |
| Fall Related ER Visits                          | 7                        | 0                                        |
| Percentage of Falls with ER Visit               | 9.1%                     | 0.0%                                     |

**Table A11: Ohio Provider Partner Fall Data From June 2025 to Aug 2026**  
36-Bed Skilled Nursing Community

# PRODUCT SPECIFICATION

## VICONIC FALL DEFENSE™




### DESCRIPTION (all sizes and weights are nominal)

|                |                          |                           |
|----------------|--------------------------|---------------------------|
| Thickness      | 7/16 in.                 | (11.1 mm)                 |
| Panel Width    | 32 in.                   | (0.81 m)                  |
| Panel Length   | 62 in.                   | (1.57 m)                  |
| Panel Coverage | 12.9 ft <sup>2</sup>     | (1.2 m <sup>2</sup> )     |
| Weight         | 0.54 lb./ft <sup>2</sup> | (2.64 kg/m <sup>2</sup> ) |

### PROPERTIES

- Compatible with most flexible flooring systems
- Offered with ADA compliant ramped reducer
- Non-adhered flooring underlayment
- Supplied in modular panels with integrated adhesive for assembly
- Can be loose-laid over most flat, rigid subfloors
- Compatible with most acrylic water based adhesives

### UNDERLAYMENT SYSTEM STRUCTURE (all measurements are nominal; not to scale)

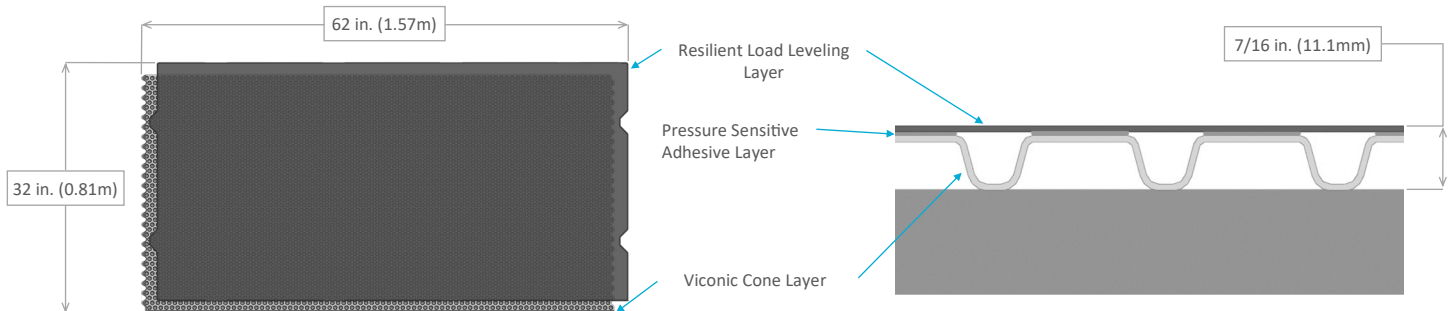

### TEST DATA

| Standard                                 |                           | Result               |
|------------------------------------------|---------------------------|----------------------|
| ASTM E492, Impact Sound Transmission*    | IIC                       | 57                   |
|                                          | HIIC                      | 63                   |
| ASTM E90, Airborne Transmission Loss*    | STC                       | 50                   |
| ASTM E2179, Delta Impact Insulation*     | ΔIIC                      | 25                   |
| ASTM F355, Head Impact Protection        | A Missile                 | 212 G's              |
|                                          | E Missile**               | 695 HIC              |
| FMVSS 201u, Head Impact Protection       |                           | 415 HIC <sub>d</sub> |
| CSA EXP08-17, Hipform Force Reduction*** |                           | 18%                  |
| ASTM F3189, Footfall Force Reduction     | Force Reduction           | 34.5%                |
|                                          | Energy Restitution        | 51.5%                |
|                                          | Vertical Deformation      | 2.1mm                |
| Rotational Penetrometer, Mobility        | Firmness                  | Pass (≤ 0.300 in.)   |
|                                          | Stability                 | Pass (≤ 0.500 in.)   |
| ASTM F970, Static Load Limit             | 50 psi                    | 0.005 in.            |
|                                          | 75 psi                    | 0.006 in.            |
|                                          | 100 psi                   | 0.008 in.            |
|                                          | 125 psi                   | 0.009 in.            |
| ASTM F36, Compression & Recovery         | 50 psi (4 hour exposure)  | 0.005 in.            |
|                                          | 100 psi (4 hour exposure) | 0.006 in.            |
| ASTM E662, Smoke Density                 | Flaming                   | Pass (≤ 450)         |
|                                          | Non-Flaming               | Pass (≤ 450)         |
| FMVSS 302, Flammability                  |                           | Pass (≤ 4in/min)     |
| ASTM C518, Thermal Insulation            | Thermal Resistance, R     | 0.856                |

\* System level evaluation with 2mm sheet vinyl over a 6" concrete slab

\*\* A single drop height (2 ft.) was used based on relevant clinical fall data collected by the University of Waterloo

\*\*\* Evaluated as an assembled flooring system using 2mm heterogeneous vinyl sheet



Viconic Health  
1100 Oakwood Blvd  
Dearborn, MI 48124

www.viconichealth.com  
info@viconichealth.com  
313-769-8009



# PRODUCT SPECIFICATION

## VICONIC FALL DEFENSE™



### Test Information

The following list contains brief summaries, plus additional notes as needed, for the majority of the test standards noted in Viconic's product specification. Please refer to the actual standard for complete information. While Viconic makes every effort to ensure consistency in production, some minor variations in performance can occur between product lots. Additionally, choice in flooring system will result in altered performance of the assembled subfloor. Viconic generally uses 2mm heterogeneous sheet vinyl for system level evaluations.

#### ASTM E492, Impact Sound Transmission

- This method covers the laboratory measurement of impact sound transmission of floor-ceiling assemblies using a standardized tapping machine. It is assumed the test specimen constitutes the primary sound transmission path into a receiving room located directly below and that a good approximation to a diffuse sound field exists in this room. The data obtained from this test is used to calculate an Impact Insulation class (IIC). High-Frequency Impact Insulation class (HIIC) is also calculated and reported.

#### ASTM E90, Airborne Transmission Loss

- This test method is used to calculate sound transmission class (STC) through the measurement of sound transmission loss of building elements. Two adjacent rooms are arranged with the flooring assembly between them. A diffuse sound field is produced in the source room creating a sound field in the receiving room. The space and time average sound pressure levels in the two rooms are determined and used to calculate STC.

#### ASTM E2179, Delta Impact Insulation

- The test chamber consists of two reverberation rooms, one located directly above another. Care is taken that the only significant sound transmission between the rooms is by way of the test specimen. A tapping machine is operated in four different locations while the sound pressure levels are measured by microphone in the room below. The improvement in Impact Insulation class ( $\Delta$ IIC) is reported.

#### ASTM F355, Impact Attenuation

- This method specifies how to measure the impact attenuation of playing surface systems and materials, specifically the peak impact acceleration. The test method uses a simulated hip-form (A missile) and head-form (E missile) to measure the impact attenuation of materials and components used as protective padding.
  - The A Missile reports the peak G value experienced when impacting a surface. Lower G values indicate a reduction in risk of injury.
  - The E Missile reports Head Injury Criterion (HIC), an indication of impact severity and risk of injury. Lower HIC values indicate a reduction in risk of injury, with values over 1000 indicating exponentially increasing probability of risk of critical injury.

#### FMVSS 201u, Head Impact Protection

- A FMVSS201u Hybrid III free motion headform is used to determine the risk of head injury in passenger vehicles. The device reports HIC where values over 1000 indicate exponentially increasing probability of critical injury risk.
- The headform impacted the flooring system at 11.34 ft/s (3.46m/s) which is equivalent to a 2 ft. freefall drop.

#### CSA EXP08-17, Hipform Force Reduction

- The Canadian Standards Association has outlined a method for evaluating the force attenuation provided by hip protectors. A mechanical surrogate pelvis and steel force plate are used to determine femoral neck forces experienced during a fall related impact on the hip. The test surface is impacted at a velocity of 9.5-10.5 ft/s (2.9-3.2 m/s), and data is presented as a percentage of force reduction compared to a non-padded baseline impact.

#### ASTM F3189, Footfall Force Reduction

- The Advanced Artificial Athlete (AAA) simulates a foot interacting with a flooring surface and measures the acceleration as a function of time, outputting three values:
  - Force Reduction: The amount of force reduced by the flooring surface during the test foot impact compared to a concrete surface. Concrete has 0% force reduction. Higher values of force reduction percentage indicate increased comfort underfoot.
  - Energy Restitution: The amount of energy returned to the test foot by the flooring surface, where bare concrete has 100% energy restitution. Lower energy restitution percentage indicate increased comfort underfoot.
  - Vertical Deformation: The maximum measured deformation of the flooring surface during the impact of the test foot.

#### Rotational Penetrometer, Mobility

- The Rotational Penetrometer is designed to measure firmness and stability of ground and floor surfaces. An inter-laboratory study revealed the device produced repeatable measurements correlating with the amount of work required to propel a wheelchair as measured by ASTM F1951.
  - Firmness is measured by spring loading a wheelchair caster into the test surface and measuring the vertical displacement of the indenter wheel.
  - Stability is measured by rotating the loaded caster 360° and re-measuring the vertical displacement.
  - Firmness and stability measurements must be less than 0.3 in. (7.6 mm) and 0.5 in. (12.7 mm) for a surface to be considered firm and stable, respectively. Note: these displacements include compression of the wheel assembly.

#### ASTM F970, Static Load Limit

- This test determines the recovery properties of resilient flooring systems after indenting the surface with a 1.125 in. (28.6 mm) diameter flat indenter under a specified load. Residual indentation is measured 24 hours after load removal.

#### ASTM F36, Compression & Recovery

- This test method determines the short-term compressibility and recovery of materials at room temperature.

#### ASTM E662, Smoke Density

- This procedure is designed to measure the specific optical density of smoke generated by the test specimen within a closed chamber. Two burning conditions, flaming and non-flaming, are simulated.

#### FMVSS 302, Flammability

- This test is used to determine the burn resistance capabilities of materials used in the occupant compartments of motor vehicles. This test is typically performed on materials in passenger cars, trucks, and buses.

#### ASTM C518, Thermal Insulation

- This test is used to quantify the thermal insulation properties of a surface. The specimen is placed between two parallel plates at constant but different temperatures. A heat flow meter measures the heat transfer between heat sources, and thermal resistance is calculated.



Viconic Health  
1100 Oakwood Blvd  
Dearborn, MI 48124

[www.viconichealth.com](http://www.viconichealth.com)  
[info@viconichealth.com](mailto:info@viconichealth.com)  
313-769-8009



Rev 19